



# MX12 Quick Start Guide


## Operating Notes

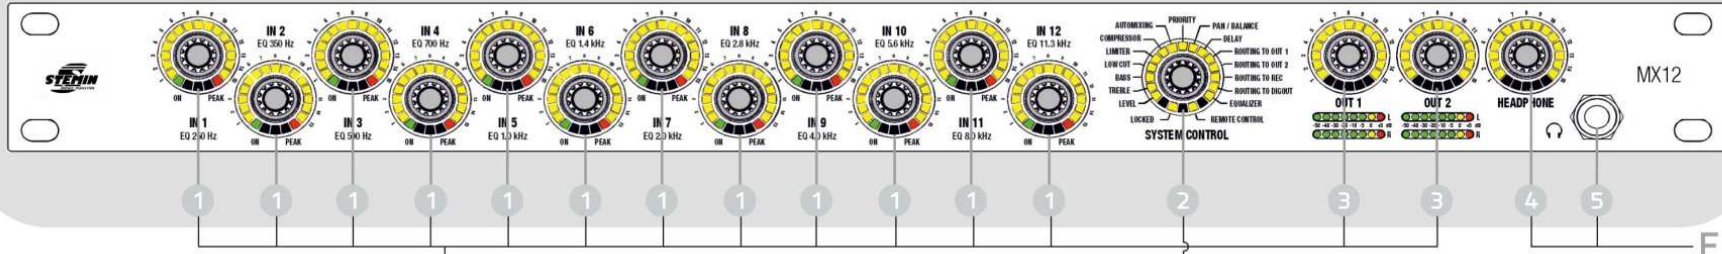

To monitor output signal, connect headphones to jack (5) and use control (4) to set listening volume.

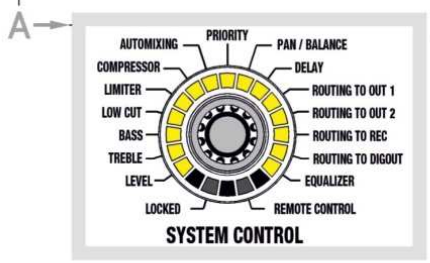


Rotate knob (2) to select SYSTEM CONTROL parameter.  
Parameter A and B: not used.

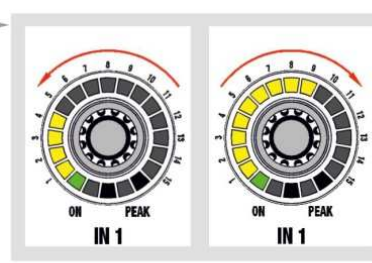


Rotate knobs (1, 3) to increase (CW) or decrease (CCW) selected parameter for each channel.  
← decrease - increase →





To activate AUTOMIXING functions for each channel or select PRIORITY channel, select function using SYSTEM CONTROL (2) and press related channel control knob (1). To deactivate function, select function and press knob (1) again.

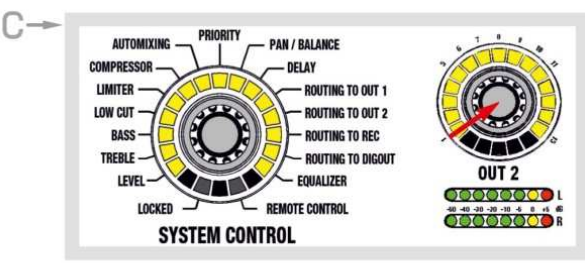

**LOCK:** To lock all controls, hold down SYSTEM CONTROL (2) and OUT 2 (3) knobs simultaneously for three seconds.  
**MUTE:** Briefly pressing an input or output knob, exception headphone (4), causes the corresponding channel to be muted. The MUTE function is indicated by the steady flashing of the LED ring. Another brief press of the knob removes the MUTE function.

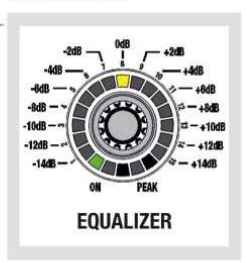

Rotate knobs (1) to increase (CW) or decrease (CCW) the specific frequency bands.

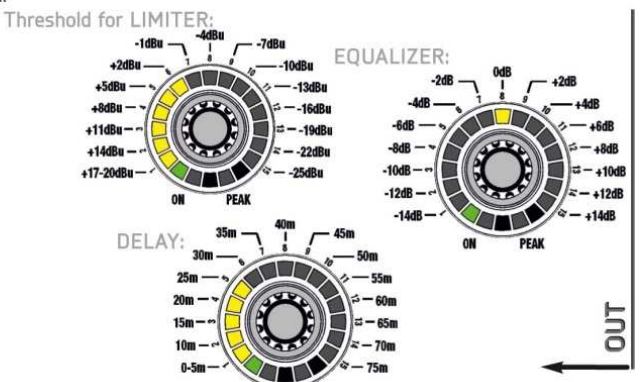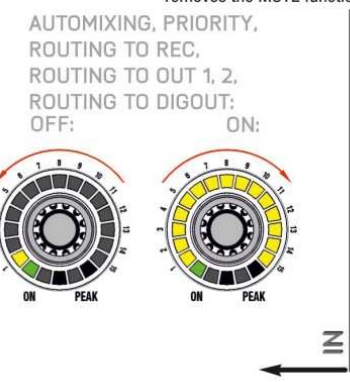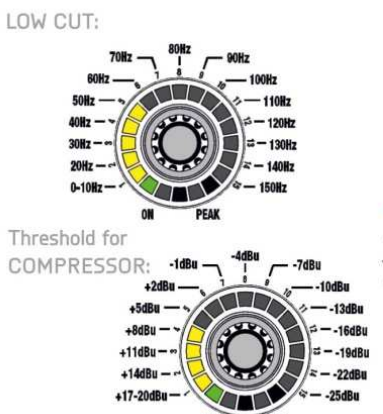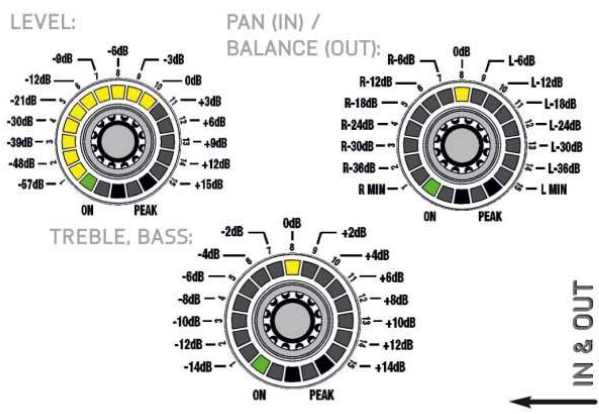

For other products and distributors worldwide visit  
Specifications subject to change without notice. Technische Änderungen vorbehalten. Ces caractéristiques sont susceptibles de modifications. Ci riserviamo il diritto di effettuare modifiche tecniche. Nos reservamos el derecho de introducir modificaciones técnicas. Especificações sujeitas a mudanças sem aviso prévio.

# MX12 Quick Start Guide



## Setting Up

